

## DE-HUMIDISTAT CONTROL

### DH-46 Automatic De-humidistat Controller

*NOTE: De-humidistat requires  
(2) low voltage wires.*



- 
- LOCATION:** Select a location about 5-1/2 feet above the floor in an area of freely circulating air with average temperature and humidity conditions. Avoid all locations near hot or cold air ducts discharging air from the dehumidification equipment.
- OPERATION:** The DH-46 makes contact on a relative humidity rise above the set point to start the dehumidifier. On a decrease in relative humidity to the set point, minus the differential, the switch breaks contact to stop the dehumidifier.
- START UP:** Place system in operation by turning the setting knob towards the low end of the scale until the dehumidifier starts up. Turn the setting knob slowly toward the high end of the scale until the dehumidifier stops.